

# Respiratory Pathogen Panel 2\*

## Quick Reference Guide

### PREPARE SAMPLE




Label cartridge  
and sample with  
Accession ID



Vortex patient  
sample for 3-5  
seconds


### LOAD SAMPLE

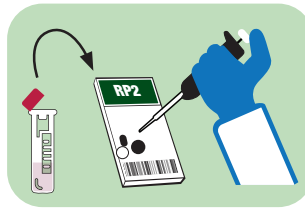

Pipette 200  $\mu$ L of sample  
into cartridge



Rotate and snap cap  
closed (Press down  
firmly "Click")

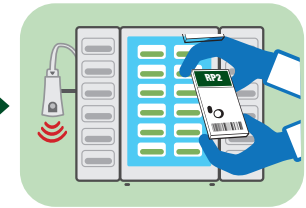

Scan and load  
cartridge

\*For Emergency Use Authorization (EUA) Only. For in vitro diagnostic use.